




The following installation details apply to models **RD-521** and **RD-521-IP**

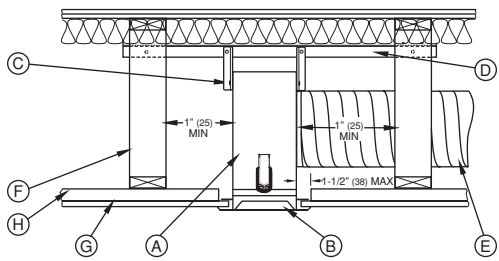

**END VIEW - Duct to Grille Connection**

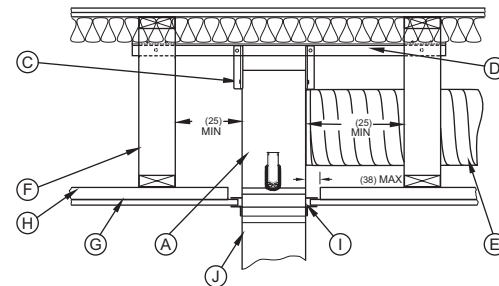

**END VIEW - Duct to Duct Connection**

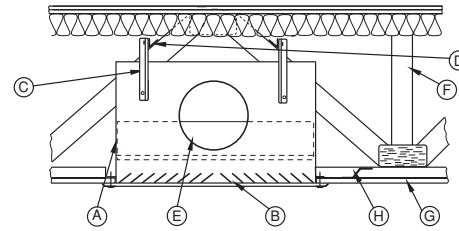

**FACE VIEW**

- (A) Damper Assembly
- (B) Grille (0.025 steel minin)
- (C)  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 GA. (16 x 16 x 0.55) or 18 swg steel wire (min)
- (D)  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 GA. (16 x 16 x 0.55) or 2" x 4" (51 x 102) wood stud support
- (E) Flex Duct UL Classified Air Duct (class 0 or 1)
- (F) Wood Truss (see UL design # L-521, L-546 or P-522)
- (G)  $\frac{5}{8}$ " (16) Gypsum Wallboard (see UL design # L521 L-546 or P-522)
- (H) RC- Channel
- (I) 1" x 1" x 22 ga. (25 x 25 x 0.85) retaining angle (min)
- (J) Air duct

Illustrations show model **RD-521** damper, model **RD-521-IP** similar.

- A. Ceiling penetrations should be located between adjacent trusses and between RC-channels without necessitating cuts in the RC-channel. If required, a maximum of one RC-channel may be cut to enable proper damper location and installation. The maximum clearance between the damper sleeve and the edges of the cutout in the ceiling material shall not exceed  $\frac{1}{8}$ " (457) on any side.
- B. The grille shall be fastened to the damper assembly using minimum No.8 screws. This is typically accomplished by securing the face of the grille to the recessed plaster ground flange of the damper, thus sandwiching the  $\frac{5}{8}$ " (16) gypsum wallboard between the two. Use a minimum of two connections, one at each end. In place of a grille, an air duct may be connected to the bottom of the dampers. In this case a minimum 1" x 1" x 22 ga. (25 x 25 x 0.85) angle on all four sides of the opening shall be mechanically fastened to the air duct so as to sandwich the  $\frac{5}{8}$ " (16) gypsum wallboard between the angle and the plaster ground flange.
- C1. Damper shall be supported with a minimum  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 ga. (18 x 18 x 0.55) vertical angle or 18 swg vertical hanger wire, in two places minimum, on opposite sides of the damper. The vertical angle or wire shall in turn be supported by a minimum  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 ga. (18 x 18 x 0.55) horizontal angle or nominal 2" x 4" (51 x 102) wood support studs. The horizontal support angles or studs shall be fastened at each end to adjacent trusses with minimum 16 d nails, No.8 screws or bolts. Only one connection per end required.
- C2. CFD-521-IP damper shall be supported with a 18 swg vertical hanger wire, in two places minimum, on opposite sides of the damper. The vertical angle or wire shall in turn be supported by a minimum  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 ga. (18 x 18 x 0.55) horizontal angle or nominal 2" x 4" (51 x 102) wood support studs. The horizontal support angles or studs shall be fastened at each end to adjacent trusses with minimum 16 d nails, No.8 screws or bolts. Only one connection per end required.

When the damper is installed in a roof/ceiling, horizontal supports shall be installed so that the damper can be properly secured. These horizontal supports can be 2" x 4" (51 x 102) wood studs or  $\frac{3}{4}$ " x  $\frac{3}{4}$ " x 26 ga. (18 x 18 x .055) steel angles. These supports are to be attached to adjacent truss members provided they are a minimum of 17- $\frac{3}{8}$ " (441) above the underside of the ceiling. As an alternate, the horizontal members can be attached directly to the underside of the roof or roof/truss provided that they are a minimum of 17- $\frac{3}{8}$ " (441) above the underside of the ceiling.

NOTE: The addition of the horizontal supports must not interfere nor shall they infringe upon the structural capabilities of the truss system.

D. Flex duct shall be UL Classified Air Ducts Class 0 or Class I. No connection is allowed on the top of the damper. In each case, a steel clamp, plastic strap or 18 swg minimum steel wire shall fasten the flex duct to the duct connection portion of the damper assembly.


NOTE: Screws, bolts, rivets, etc., used to install the damper or grille **MUST NOT INTERFERE WITH DAMPER BLADE OPERATION.**

For installation in floor-ceiling designs L-521, L-546, L-558, L-562, L-574, L-576, L-581, L-583, L-585 and in roof/ceiling designs P-522, P-533, P-538, P-545 and P-547.  
See UL Fire Resistance Directory.

Underwriter's Laboratories file #R14603.


The product is also listed by CSFM fire #3226-0368:104 and conforms to NFPA 90A and NFPA 92A.  
Warnock Hersey File # WHI-495-PSH-0177,-0178

Information is subject to change without notice or obligation.

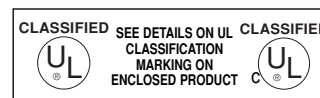


NOTE: Dimensions in parentheses ( ) are millimeters.


The following installation details apply to model **RD521-BT** and **RD-521-IP**

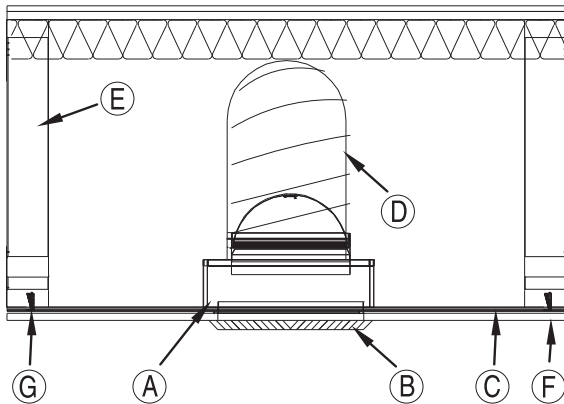

- Ⓐ DAMPER ASSEMBLY
- Ⓑ GRILLE
- Ⓒ BOOT RAIL
- Ⓓ FLEX DUCT, UL CLASSIFIED
- Ⓔ WOOD TRUSS
- Ⓕ 5/8" (16) GYPSUM WALL BOARD (SEE UL DESIGN)
- Ⓖ FASTENERS, (MIN. 16d NAIL, #8 SCREW OR BOLTS)

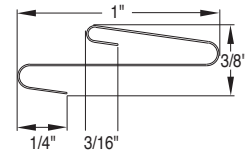

**Standard Boot Rail**

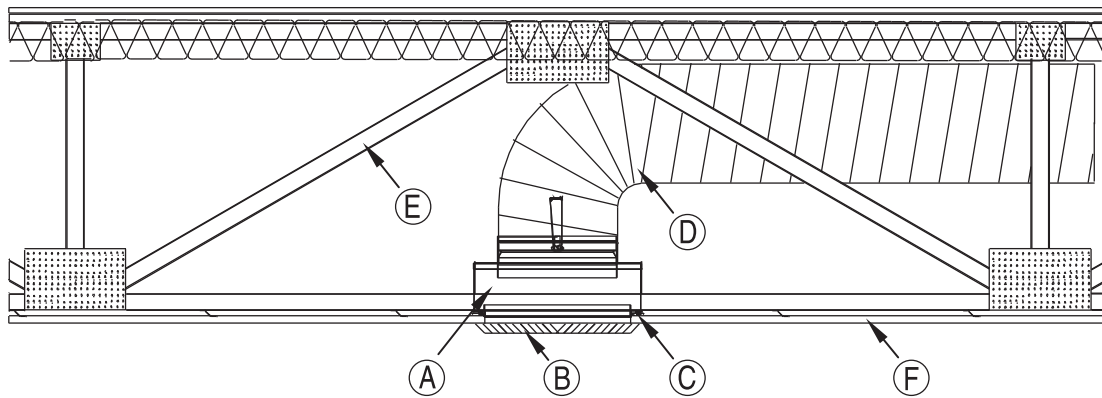

**NOTE:** Illustrations show CFD-521-BT; CFD-521-IP similar.

- A.** Ceiling penetrations should be located between adjacent trusses and between RC-channels without necessitating cuts in the RC-channel. If required, a maximum of one RC-channel may be cut to enable proper damper location and installation. The maximum clearance between the damper sleeve and the edges of the cutout in the ceiling material shall not exceed 1/16" (1.60) on any side.
- B.** The grille shall be fastened to the damper assembly using minimum No.8 screws. This is accomplished by securing the face of the grille to the recessed plaster ground flange of the damper, thus the drywall will be between the back of the grille and the underside of the plasterground. A minimum of two fasteners, one each on opposite sides of the damper is required.
- C.** Damper shall be supported with a standard boot rail, in two places minimum, on opposite sides of the damper. The boot rail shall be fastened at each end to the trusses with minimum 16 d nails, No.8 screws or bolts 2" long (min.). Only one connection per end required.

**NOTE:** The addition of the horizontal supports must not interfere nor shall they infringe upon the structural capabilities of the truss system.

- D.** Flex duct shall be UL Classified Air Ducts Class 0 or Class I. In each case, flex duct to the duct connection portion of the damper assembly shall be done in accordance with the Air Distribution Council (ADC) standard practice.

**NOTE:** Screws, bolts, rivets, etc., used to install the damper or grille **MUST NOT INTERFERE WITH DAMPER BLADE OPERATION.**

1 Hour Rated.

CFD-521-IP for installation in floor designs L-521, L-546, L-558, L-562, L-574, L-576, L-581, L-583, L-585 and in roof/ceiling designs P-522, P-533, P-538, P-545 and P-547.

CFD-521-BT for installation in floor designs L-521, L-546, L-574, L-576, L-581, L-583, L-585 and in roof/ceiling designs P-522, P-545 and P-547. See UL Fire Resistance Directory Underwriter's Laboratories file #R14603.

The product is also listed by CSFM fire #3226-0368:104 and conforms to NFPA 90A and NFPA 92A.

Warnock Hersey File # WHI-495-PSH-0177,-0178

