


The following installation details apply to models **FSD-131**, **FSD-131-OP**, **FSD-132** and **FSD-132-OP**



CLASSIFIED SEE DETAILS ON UL CLASSIFIED  
CLASSIFICATION MARKING ON  
ENCLOSED PRODUCT


TESTED PER U.L. 555

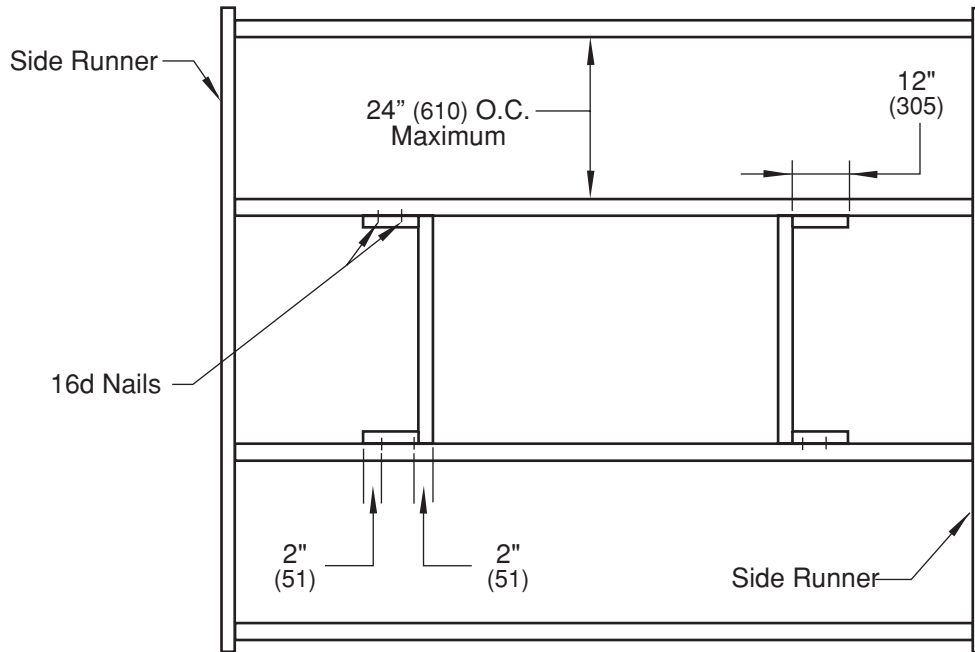

**Opening Preparation Detail - Top View**

## NOTES

1. Gypsum panels must be attached, 12" (305) O.C. maximum, to all stud and runner flanges surrounding opening with 1- 5/8" (41) drywall screws or 6d nails.
2. Mounting angles shall be a minimum of 1-1/2" x 3/4" x 20 gauge (38 x 19 x 1). The angles should be attached to the sleeve, not the partition, with No.10 (M5) sheet metal screws, or welds, or 1/4" x 20 gauge (6 x 1) bolts at 6" (152) o.c. maximum. A minimum of two connections per side, top, bottom. Mounting angles shall overlap the wall a minimum of 1" (25). A minimum 3/4" x 20 gauge (19 x 1) flange termination may be used in lieu of mounting angles on the corridor side of the damper sleeve. Refer to Sleeve Termination Supplemental Installation Instructions for further details.
3. See Tunnel-Type Corridor Ceiling installation instruction sheet for additional details.

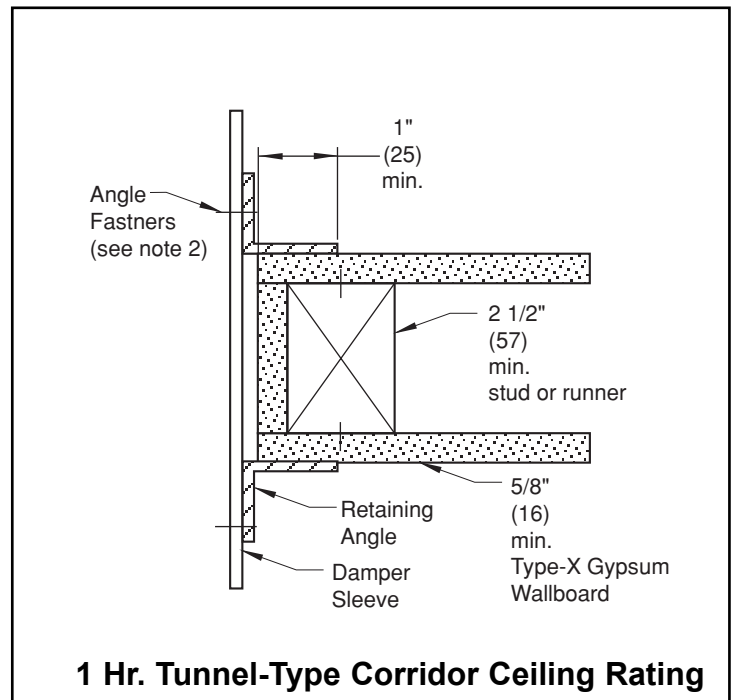

**1 Hr. Tunnel-Type Corridor Ceiling Rating**