



Opening Preparation Detail




Note: Full length studs are not required next to the damper if the spacing from the damper to the full length stud does not exceed the maximum stud spacing. The opening may be framed with studs that are attached to full length studs.

Double Stud Not Required On Penetrations
36" x 36"(915 x 915) Or Smaller

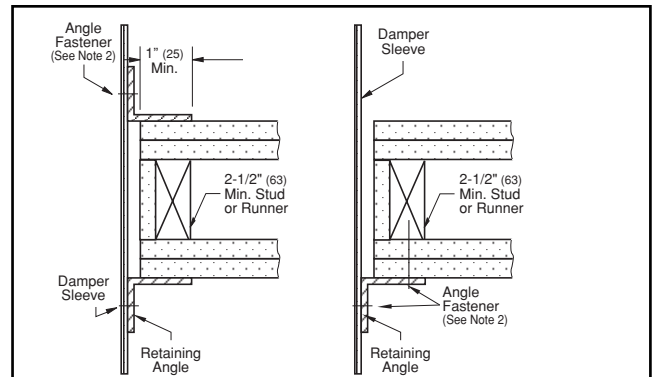

For Openings ≤ 80" x 48"(2032x1218)
40" x 96"(1016x2438)

Wall with Two Layers of Drywall

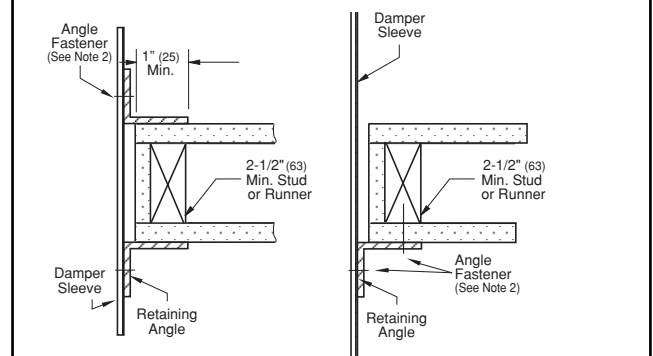

For Openings ≤ 80" x 48"(2032x1218)
40" x 96"(1016x2438)

Wall with Single Layer of Drywall

NOTES

- Gypsum panels must be fastened 12" (305) O.C. maximum to all stud and runner flanges surrounding opening.
- Mounting angles shall be a minimum of 3/4" x 1-1/2" tall x 20 gauge (19 x 38 x 1.0). For opening sizes ≤ 80" x 48" (2032 x 1219) or 40" x 96" (1016 x 2438) retaining angles are only required on one side of the partition and must be attached to the sleeve and the partition. For larger openings (or optional on smaller openings), 1-1/2" x 1-1/2" x 16 gauge (38 x 38 x 1.5). retaining angles are required on both sides of the partition and must be attached to the sleeve. Attachment to the sleeve shall be with No. 10 (M5) screws or bolts, 3/16" (4.8) diameter steel rivets, Quick-Lock joints or welds, at 12" (305) o.c. maximum. Attachment to partition/opening shall be with min. #10 fasteners with a minimum length as follows: For wood stud openings, the min. length is 1-1/2" longer than the thickness of drywall on the attachment side. The fasteners in the partition should be located such that they are 1/2" below the top of the 1-1/2" flange of the retaining angles. Fasteners in the partition should be spaced 12" o.c. max. A minimum of two connections per side, top and bottom. A minimum 3/4" x 20 gauge (19 x 1) flange termination may be used in lieu of mounting angles. Refer to Sleeve Termination Supplemental Installation Instructions and Framing for Fire Dampers for further details. Ensure that attachment device does not interfere with the operation of the damper and the free movement of the damper blades.
- All fasteners to be per U.L. Classified wall design.
- See standard damper installation instruction sheets for additional details.

Fire and Fire Smoke Dampers IIWFS May 2007