


The following installation details apply to models **AC-41, AC-42, AC-51 and AC-52**

Note: All Dampers installed within an insulated duct shall ensure that the insulation is not between the damper frame and duct. Also, no insulation shall be located between the damper frame and bracket. Damper operation can be affected if insulation is not trimmed back.

Direct Drive Field Installation

1. Remove bracket from frame by removing screw.
2. Remove drive shaft and bushing from bracket.
3. Reinsert screw into the hole left in the frame.
4. Insert the driveshaft onto the axle of the drive blade on the linkage side. The drive blade is identified with a label.
5. Insert the bushing, flanged end first, onto the drive shaft.
6. Insert the bracket onto the coupler assembly, fitting the bushing onto the bracket hole.
7. Screw the bracket to the frame using #10 x 1/2" tek screw (by others). Minimum of one on each side.

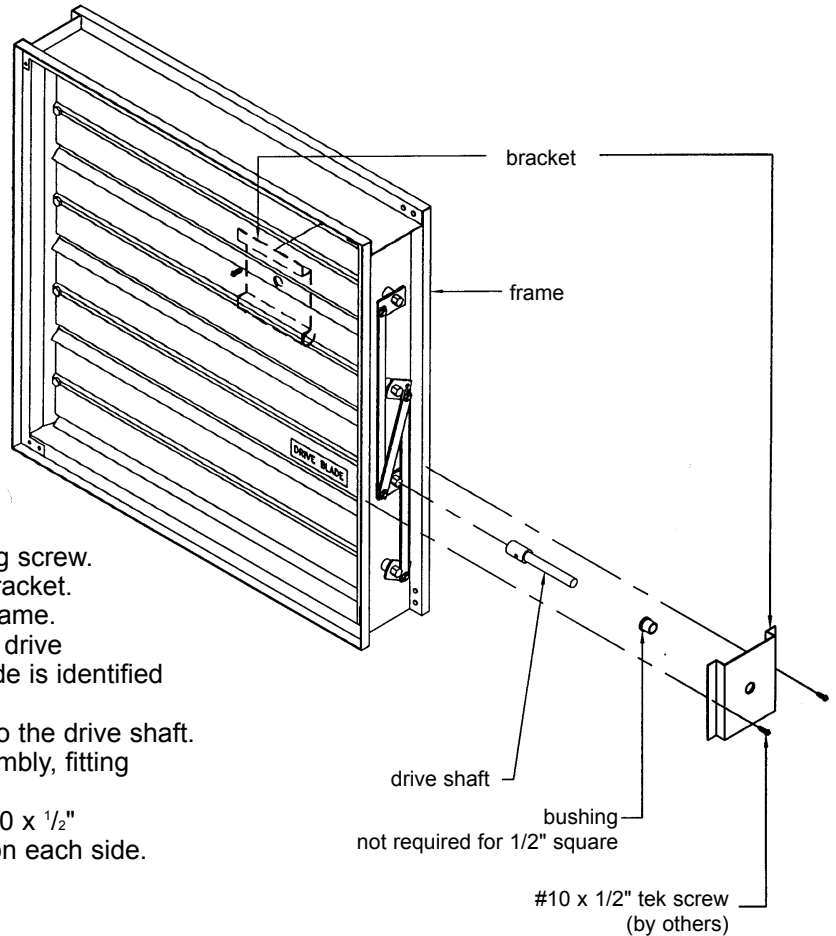

Single Section or Multi-Section Installation

- A. Inspect ductwork or opening where damper is to be installed for any obstructions or irregularities that might interfere with blade or linkage rotation or actuator mounting. Duct opening should measure approximately 1/4" (6) larger than the damper dimensions and should be square and level. Duct work must be properly supported around damper to prevent sagging. Care must be taken to prevent dropping, dragging, stepping on, bending, twisting, racking, etc. Do not lift by blades, linkage, axle, motor, or jackshifting.
- B. Position damper section(s) together in duct or opening. Align and match frame markings or labels on adjacent sections, see figure 1. Unless specifically designed for vertical blades, damper must be mounted with blade axis horizontal.
- C. Fasten adjacent frame sections together on front and back sides with screws or nuts and bolts. Shim damper frame and duct opening properly to prevent distortion of frame. Damper should be braced at every horizontal mullion, minimum 8 feet (2438) center-to-center. Dampers in high velocity / high static pressure systems require additional bracing.

4B	3B	2B	1B
4A	3A	2A	1A

Figure 1 - Multiple Assembly Tags

